

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Online Parts Request: parts.request@hillsdalefurniture.com - Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (4) Long Allen Bolts
- B (4) Short Allen Bolts
- C (8) Spring Washers
- D (8) Flat Washers
- E (4) Hex Nuts
- F (1) Allen Wrench

PARTS LIST

- G (1) Headboard Panel
- H (1) Footboard Panel
- J (2) Leg Extensions

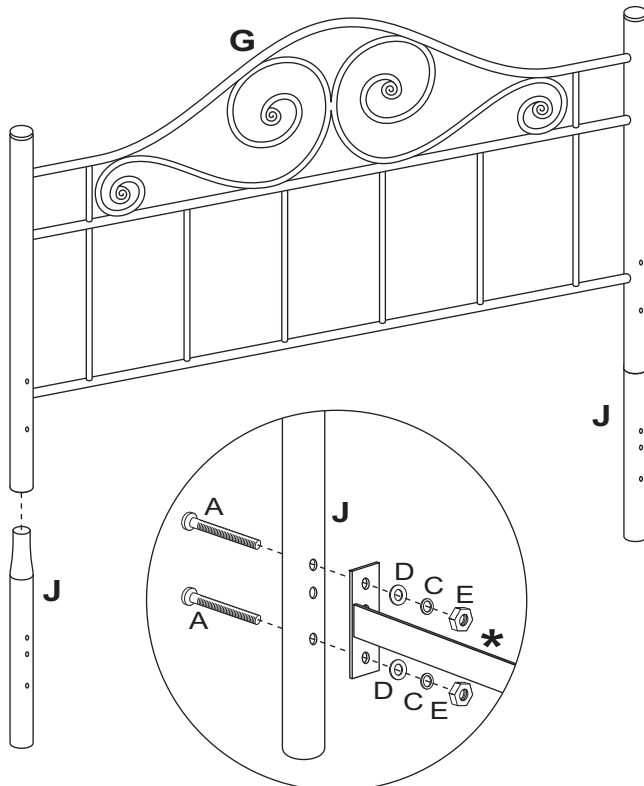
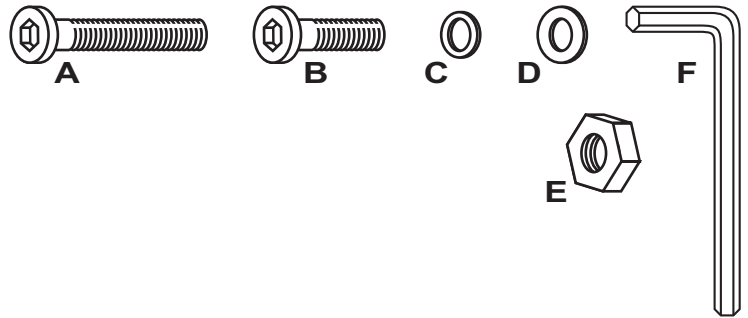


FIGURE A

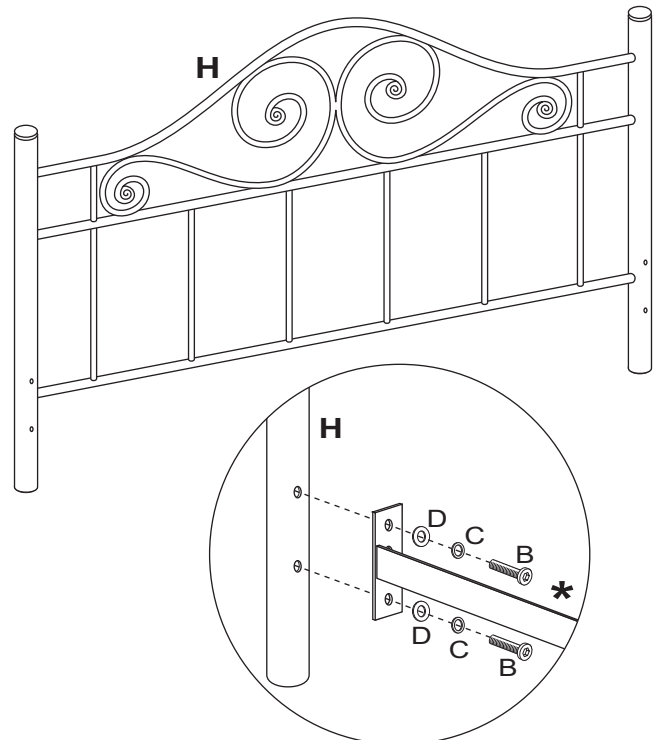


FIGURE B

STEP 1

Begin assembly by attaching each Leg Extension (J) to the bottom of the Headboard Panel (G) by firmly sliding into place.

STEP 2

Next, attach the bed frame (*Not Included) to each Leg Extension (J) using 2 Long Allen Bolts (A) from the backside, 2 Flat Washers (D), 2 Spring Washers (C) & 2 Hex Nuts (E) per each side. Tighten all bolts. See Figure A.

STEP 3

Finally, attach the bed frame (*Not Included) to each post on the Footboard Panel (H) using 2 Short Allen Bolts (B), 2 Spring Washers (C) & 2 Flat Washers (D) per each side. Tighten all bolts. See Figure B. The assembly of your new metal bed set is now complete.